

GENERAL INFORMATION

- When disposing of the appliance, the regulations regarding oil disposal must be observed.
- The heater should not be used in a room with a floor area of less than 5 m².
- The cord should not be placed near the hot surface of the appliance.
- This heater is intended for indoor household use only.

Please note: It is normal to hear a noise when the heater is first switched on or after it has not been used for a long time. This noise will disappear once the heater has been switched on for a short time.

DESCRIPTION

- | | | |
|--------------------|-------------------|-----------------------|
| 1. Carrying handle | 2. Power switch | 3. Thermostat setting |
| 4. Front cover | 5. Radiator cover | 6. Wheels |




Model	Supply voltage	Power
OR01	230V/50Hz	2000W

SAFETY NOTICE


When using an electrical appliance, basic safety precautions should always be observed, including the following:

- This appliance is not intended for use by persons with reduced physical, sensory or mental abilities, or by children, unless supervised by a person responsible for their safety.
- Connect the appliance to a single-phase AC power supply with a voltage corresponding to the voltage indicated on the type plate.
- Do not cover the radiator with anything.
- The radiator must not be placed immediately below an electrical outlet.
- Do not place the power cord under the carpet or cover it with anything.
- Do not use the radiator with a damaged cord or plug.
- Do not use an extension cable.
- Do not insert any objects into the air inlet or outlet openings.
- Do not place the radiator near combustible materials, surfaces or substances.
- Do not use the radiator near or in the immediate vicinity of a bath, shower or swimming pool.
- This radiator is hot when in use. To avoid burns and personal injury, do not allow bare skin to touch hot surfaces.
- Make sure that no other appliances are used on the same electrical circuit as this heater, as overloading may occur.
- This heater is filled with a precise amount of special oil. Repairs requiring the opening of the oil container must only be carried out by the manufacturer or their service department.

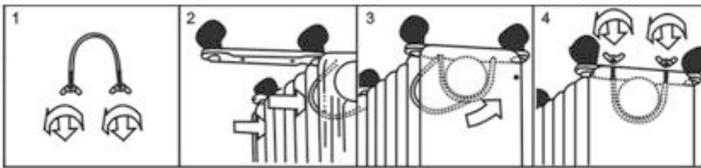

1. Place the radiator body upside down and make sure it is stable and will not fall.
2. Unscrew the wing nuts from the supplied U-bolt and attach the U-bolt to the flange pointing between the first and second slats (near the front cover).
3. To attach the wheel mounting plate to the radiator body, you should insert the threaded ends of the "U" bolt into the holes on the wheel mounting plate.
4. Screw the wing nuts back onto the U-bolt and secure them properly. **Caution:** do not over tighten as this may damage the radiator flange.
5. Unscrew the ball nut from the wheel, align the shaft into the hole of the wheel mounting plate, insert it and screw on the ball nut.
6. Repeat steps 2, 3, 4 and 5 to install the rear wheels on the rear of the radiator.

Note: The rear castors must be mounted between the two end ribs.

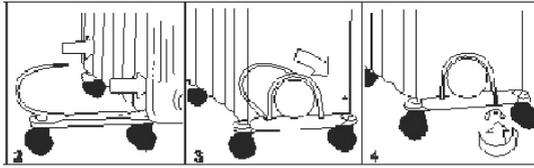

INSTRUCTIONS FOR USE

The heater is packed with the feet not attached. The feet must be attached before the heater can be put into operation.

WARNING: Do not use the heater without the feet attached. Operate the heater in the upright position only (feet down, controls up). Any other position could cause a dangerous situation.

1. Before using the heater, make sure it is on a firm and stable surface.
2. Set all controls to the "OFF" position and insert the plug into the socket.
3. Turn the thermostat knob clockwise to the "MAX" position and turn on the heater as follows:
Switch I for low heat, switch II for medium heat and turn both switches on for high heat.
4. Once the room has reached the desired temperature, slowly turn the thermostat knob counterclockwise until the indicator light goes out. You can now leave the thermostat in this position. Once the room temperature drops below the set temperature, the unit will automatically turn on until the set temperature is reached again. In this way, the room temperature remains constant with the most economical use of electricity.
5. To change the room temperature setting, turn the thermostat knob clockwise to increase the temperature or counterclockwise to decrease it.
6. This heater includes an overheat protection system that shuts off the heater when parts of the heater become excessively hot.
7. To turn the heater completely off, turn all controls to the "OFF" position and then pull the plug from the socket.

CLEANING AND MAINTENANCE

1. Always unplug the power plug and let the cooler cool down before cleaning.
2. Wipe the radiator with a soft, damp (not wet) cloth.

WARNING:

Do not immerse the heater in water. Do not use any cleaning chemicals such as detergents and abrasives. Do not allow the interior to get wet as this could cause a hazard.

3. To store the heater, wrap the cable around the coil and store it in a clean, dry place.
4. In the event of a malfunction or damage, do not attempt to repair the heater yourself, as it could be a fire or electric shock hazard.

The product has been issued with a CE declaration of conformity in accordance with the applicable regulations.

On request from the manufacturer: info@solight.cz, or downloadable from www.solight.cz.



SOLIGHT

Solight Holding, s.r.o., Na Brně 1972, Hradec
Králové 500 06, Czech Republic.