


EN Installation Instructions WO800-B, WO800-W


Thank you for purchasing our product. Please read this manual carefully and heed the safety warnings and instructions before installing, using or repairing the equipment. This will ensure not only the protection of persons, but also the long life of the equipment.

Mark	Operating voltage	Consumption	Angle of illumination	Chromaticity	Dimensions	Coverage
WO800-B	AC175~265V	12W	120°	3000K, 4000K, 6000K	175x90x29mm	IP 54
WO800-W	AC175~265V,	12W	120°	3000K, 4000K, 6000K	175x90x29mm	IP 54

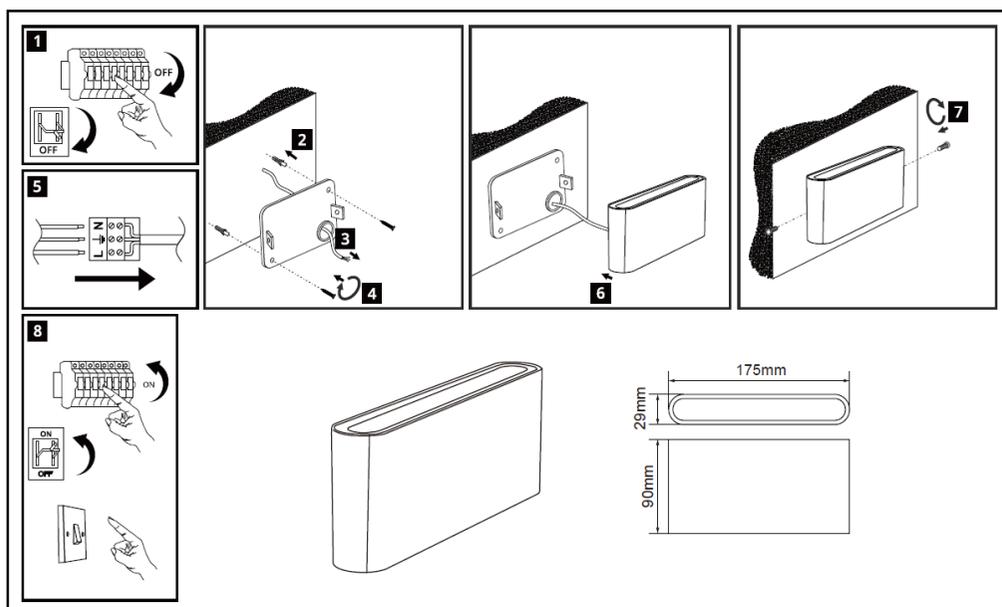

The light source of this luminaire is non-replaceable, at the end of its service life the entire luminaire must be replaced and disposed of in a designated place. This product contains a light source that for design reasons cannot be removed for verification and therefore the entire product is considered a light source. The power cord cannot be replaced if damaged, the unit must no longer be used.

3CCT Switch

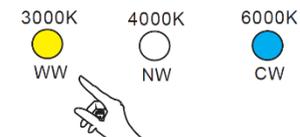

SELECT BY SLIDING THE SLIDER ON THE POWER SUPPLY

WARNING

1. Installation may only be carried out by a qualified worker with a qualification according to Decree No. 50/1978 Coll., as amended, at least a worker with knowledge according to § 5 of Decree No. 50/1978 Coll., as amended.
2. Do not cover the luminaire with anything or hang anything on it
3. Do not repair or modify the equipment in any way.

INSTALLATION

1. Switch off the power supply
2. Drill holes in the wall and insert dowels into them
3. Push the supply cable through the hole in the cover
4. Screw the cover to the wall
5. Connect the supply cable to the terminal block
6. Put on the luminaire
7. Screw the luminaire to the cover
8. Switch on the power supply

Chromaticity switch: set the desired light temperature with the switch inside the luminaire

